

ZU1200M thermistor swap SOP

Please disconnect the power cord and remove the ZU1200M from the case before proceeding with the following steps.



Locate the four screws on the cover as shown and remove them with a screw driver



Lift the casing and the protective film to reveal the PCB (circuit board) as shown



Locate the two thermistors in white color as shown and swap their connections with each other