

HDDBOOST Firmware upgrade guide

Mar. 9, 2010

Taiwan Headquarters

SilverStone Technology Co., Ltd.
11F No. 106, San-Hsing Rd., Chung-Hua City, Taipei County, Taiwan, R.O.C. 106
Tel: +886-2-8227-6222 Fax: +886-2-8227-3010

**USA Branch Office
(North/Central/South America Logistic Center)**

SilverStone Technology Inc.
20880 Central Road, City of Industry, CA91715, USA
Tel: +1-626-964-2216 Fax: +1-626-964-2216

Europe Logistic Center


SilverStone Technology GmbH
Humboldtstr. 61, D2043 Hamburg
Tel: +49-40-675011-0 Fax: +49-40-675011-88

Download HDDBOOST utility and firmware from SilverStone website

Download HDDBOOST Utility

Major Features:

- Monitor synchronize status
- Manual Start synchronize HDD>SSD
- Firmware upgrade
- Check HDDBOOST firmware version
- Monitor up to 4 sets of HDDBOOST

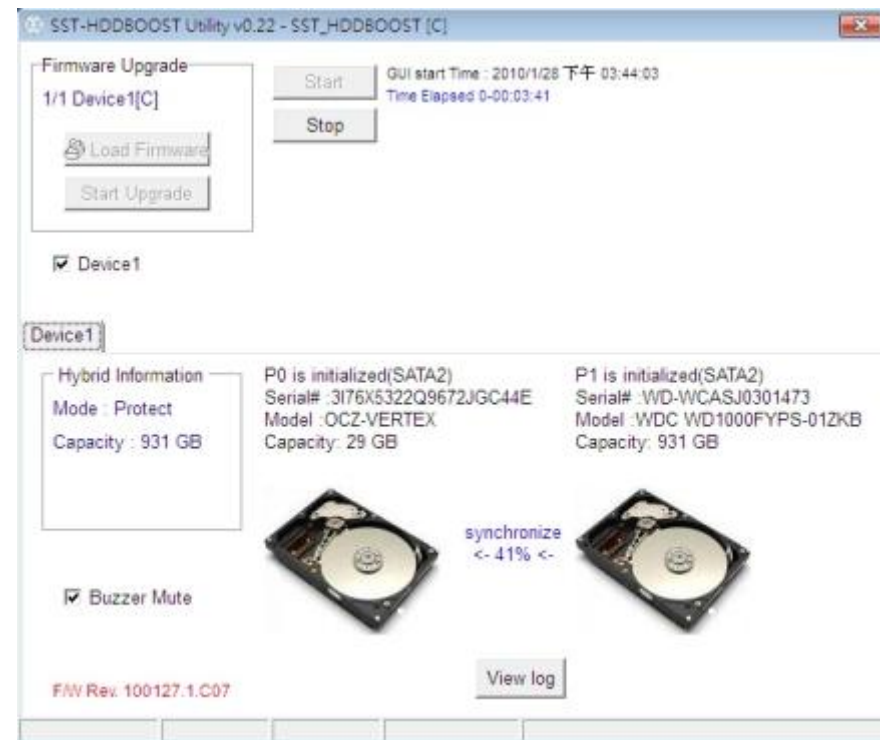


Notice:

If your HDDBOOST is from the initial production run (serial number AC09520711 to AC09521708) with optional USB connection, please do not use USB cable to upgrade firmware. Newer firmware can be updated via SATA connection.

Condition 1 - Can boot from HDDBOOST with HDD and SSD installed

Upgrade Firmware

1. Click “Load Firmware” button.
2. Select the latest firmware.
3. Press the “Start Upgrade” button.
4. Firmware upgrade manager will pop up a window to complete firmware update.
5. Please turn off the power (NOT RESTART) and then power on computer again, the new HDDBOOST firmware will now be active.

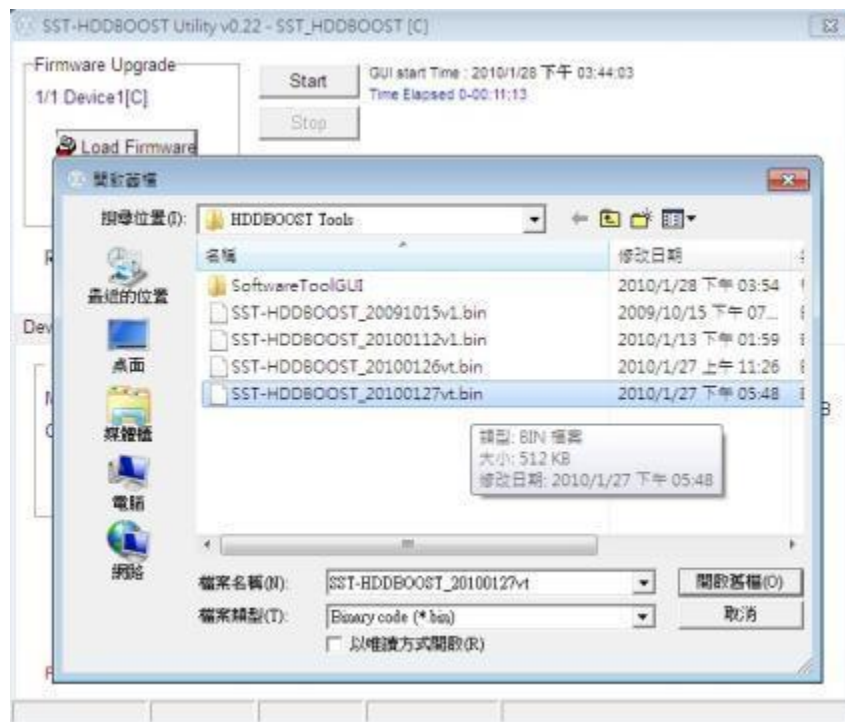

Condition 2 - Cannot boot from HDDBOOST (or BIOS cannot detect HDDBOOST)

1. Set HDDBOOST as a non-booting drive and boot from your existing system hard drive, or you can install operation system into HDDBOOST with only hard drive installed (without SSD).
2. After login into Windows (or finish operation system installation), please download HDDBOOST Utility and newest firmware from SilverStone website.
3. Use HDDBOOST Utility to upgrade to the latest firmware. (refer to Page.2)

