

Warranty Information

This product has a limited 1 year warranty in North America and Australia.

For information on warranty periods in other regions, please contact your reseller or SilverStone authorized distributor.

本产品自购买之日起，于中国地区（不包含澳门，香港特别行政区）享有一年有限质保（部分产品为二年，三年或五年）。详细保固年限请参照官方网站 <https://silverstonetek.com.cn/> 公布之产品型号为依据。

Warranty terms & conditions

- Product component defects or damages resulted from defective production is covered under warranty. Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.
 - Usage in accordance with instructions provided in this manual, with no misuse, overuse, or other inappropriate actions.
 - Damage not caused by natural disaster (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc...)
 - Product is not disassembled, modified, or fixed. Components not disassembled or replaced.
 - Warranty mark/stickers are not removed or broken.
 Loss or damages resulted from conditions other than ones listed above are not covered under warranty.
- Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or loss associated with the use of product.
- Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product or incidental or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.
- Warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second hand purchaser.
- You must provide sales receipt or invoice with clear indication of purchase date to determine warranty eligibility.
- If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone <http://www.silverstonetek.com>.
Please note that: (i) You must provide proof of original purchase of the product by a dated itemized receipt; (ii) You shall bear the cost of shipping (or otherwise transporting) the product to SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service; (iii) Before you send the product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website. Please visit <http://www.silverstonetek.com> for the latest updates.

Additional info & contacts

For North America (usasupport@silverstonetek.com)

SilverStone Technology in North America may repair or replace defective product with refurbished product that is not new but has been functionally tested. Replacement product will be warranted for remainder of the warranty period or thirty days, whichever is longer. All products should be sent back to the place of purchase if it is within 30 days of purchase, after 30 days, customers need to initiate RMA procedure with SilverStone Technology in USA by first downloading the "USA RMA form for end-users" form from the below link and follow its instructions.
<http://silverstonetek.com/contactus.php>

For Australia only (support@silverstonetek.com)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Please refer to above "Warranty terms & conditions" for further warranty details.

SilverStone Technology Co., Ltd. 12F No. 168 Jiankang Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C. + 886-2-8228-1238 (standard international call charges apply)

For Europe (support.eu@silverstonetek.de)

For China (support@silverstonetek.com.cn)

For all other regions (support@silverstonetek.com)

有毒有害物质/元素及其化学含量表

部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电机组件	X	0	0	0	0	0
金属结构件	0	0	0	0	0	0
塑胶结构件	0	0	0	0	0	0
线缆/连接器	0	0	0	0	0	0
介质/其它	0	0	0	0	0	0
包装材料	0	0	0	0	0	0
辅助材	0	0	0	0	0	0

本表格依据SJ/T 11364的规定编制

○：表示该有毒有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

产品合格证

检验员：检01
生产日期：见产品条码



SilverStone Technology Co., Ltd.

www.silverstonetek.com

All trademarks are registered to their respective owners.

© 2018 SilverStonetek Co., Ltd. All Rights Reserved.


NO.G11228931



SILVERSTONE[®]
Designing Inspiration

Nitrogon Series NT08-115XP

34mm super slim CPU cooler for
Intel platform

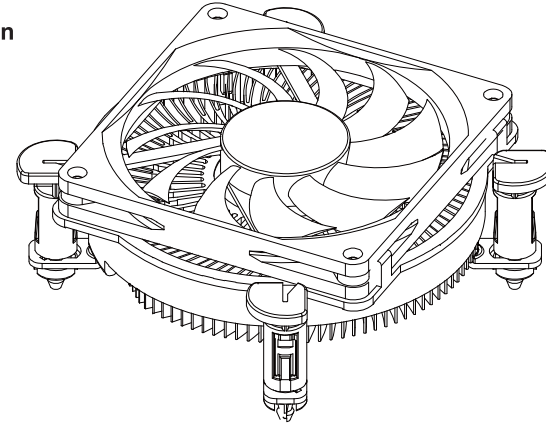

SPECIAL FEATURES

- Supports Intel LGA1150/1151/1155/1156 processors
- Designed for Mini-STX systems at 34mm tall
- Custom slim 80mm PWM fan for excellent cooling and low noise
- True solid copper base with extruded aluminum fins for up to 65W TDP
- Push-pin design for easy installation

65W

INTRODUCTION

SilverStone Technology's Nitrogon NT08-115XP is a super slim profile CPU cooler designed for space limited super slim cases such as SilverStone VT01 for Intel Mini-STX platform.

It has a true, solid copper center and base with extruded aluminum fins for superior thermal conductivity for up to 65W.

The custom super slim 80mm PWM fan can maintain low noise during operation.

With a total height of 34mm tall and push-pin design for easy installation, the NT08-115XP is an excellent upgrade for any low-profile system on Intel LGA1150/1151/1155/1156platforms.

Installation Guide

1

ENGLISH

Apply included heatsink compound on you CPU evenly.

DEUTSCH

Tragen Sie die mitgelieferte Wärmeleitpaste gleichmäßig auf Ihre CPU auf.

FRANÇAIS

Appliquez le dissipateur de chaleur composé sur votre CPU de façon régulière.

ESPAÑOL

Aplicar el compuesto conductor térmico incluido en su CPU de forma uniforme.

ITALIANO

Applicare in modo uniforme sulla CPU il composto termico per il dissipatore di calore fornito in dotazione.

РУССКИЙ

Равномерно нанесите прилагаемую термопасту на процессор.

繁體中文

請將散熱膏均勻地塗抹在CPU上。

簡體中文


請將散熱膏均勻地塗抹在CPU上。

日本語

付属のヒートシンクコンパウンドをCPUにむらなく塗ります。

한국어

제공된 방열판 접착제를 CPU에 고르게 바릅니다.

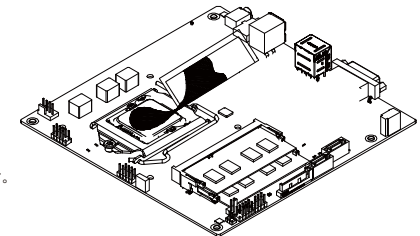

Installation Guide

2

ENGLISH
Place the NT08-115XP cooler on top of the installed CPU, and align the four fasteners with the holes on the motherboard. (Make sure each fastener is oriented as shown, with the arrow directed outward.)

DEUTSCH
Setzen Sie den NT08-115XP Kühler auf die installierte CPU auf, achten Sie darauf, dass die vier Halter über den Aussparungen im Motherboard sitzen. (Achten Sie darauf, dass die Halter wie in der Abbildung ausgerichtet sind – der Pfeil zeigt nach außen.)

FRANÇAIS
Placez le NT08-115XP par-dessus le processeur installé, et alignez les 4 fixations rapides avec les trous de la carte mère. (Vérifiez bien que chaque fixation rapide est orientée comme montré, avec la flèche dirigée vers l'extérieur.)

ESPAÑOL
[Sitúe-el disipador NT08-115XP sobre la CPU instalada y alinee los cuatro cierres con los agujeros de la placa base. (Asegúrese de que cada cierre se oriente de la forma que se muestra, con la flecha hacia el exterior.)


ITALIANO
Posizionare il cooler NT08-115XP sul CPU installato ed allineare i quattro ganci con i fori della scheda madre (assicurarsi che ciascun gancio sia orientato come mostrato, con la freccia diretta verso l' esterno).

РУССКИЙ
Поместите кулер NT08-115XP на верхнюю часть установленного ЦП, выровняйте четыре зажима и соответствующие отверстия материнской платы. (Убедитесь, что зажимы ориентированы так, как показано на рисунке, т.е. стрелка направлена наружу.)

繁體中文
將NT08-115XP 散熱器置於已安裝CPU上方, 並將四個散熱器螺絲對準主機板上的孔位。
(請確認每個散熱器螺絲的方向與附圖上的箭頭方向一致)

日本語
NT08-115XPクーラーをインストールされたCPUの上に置き、マザーボードの4つの穴に4個のファスナーを合わせます。
(各ファスナーは図のように矢印を外向きにしてください。)

한국어
NT08-115XP를 장착된 CPU위에 위치하고, 4개의 고정 핀을 메인보드의 구멍에 정렬합니다.
(반드시 고정핀이 그림과 같이 화살표 방향이 바깥쪽으로 위치하도록 합니다.)

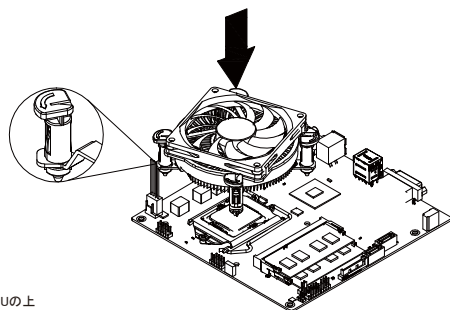

3

ENGLISH
Press and fasten two screws in position A as shown and then the other two in position B to fix the CPU cooler in place.

DEUTSCH
Befestigen Sie zum Fixieren des CPU-Kühlers zwei Schrauben wie abgebildet in Position A und zwei weitere Schrauben in Position B.

FRANÇAIS
Appuyez sur deux vis et vissez deux vis en position A comme indiqué puis les deux autres en B pour fixer le refroidisseur de CPU en place.

ESPAÑOL
Presione y fije dos tornillos en la posición A como se muestra y luego los otros dos en la posición B para colocar el disipador de la CPU en su lugar.

ITALIANO
Premere e stringere le due viti in posizione A, come mostrato, quindi le due viti in posizione B per fissare in posizione il dissipatore di calore CPU.


РУССКИЙ
Нажмите и закрепите два винта в положении A, как показано, а затем два винта в положении B для фиксации процессора.

繁體中文
請依圖示依序下壓並鎖固位置A的螺絲, 再依序下壓並鎖固位置B的螺絲。

简体中文
请依图标依序下压并锁固位置A的螺丝, 再依序下压并锁固位置B的螺丝。

日本語
CPUクーラーは、図のようにAの位置にネジ2本で固定し、残り2本はBの位置に締めて所定の位置に固定します。

한국어
그림과 같이 위치 A에서 2개의 나사를 눌러 조인 후 위치 B에서 나머지 2개의 나사를 사용하여 CPU 쿨러를 제자리에 고정합니다.

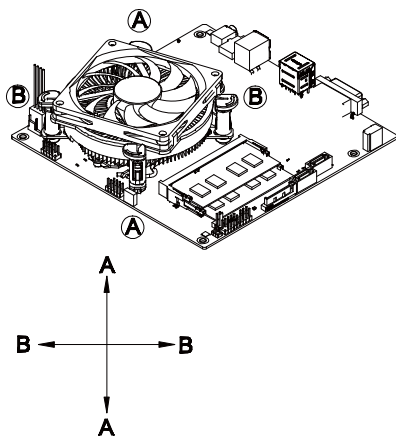

4

ENGLISH
When the NT08-115XP is installed, connect the CPU fan cable to the motherboard fan header for CPU.

DEUTSCH
Wenn der NT08-115XP installiert ist, verbinden Sie das CPU-Lüfterkabel mit der Motherboard-Lüftersteckleiste für die CPU.

FRANÇAIS
Une fois le NT08-115XP installé, connectez le câble du ventilateur de CPU à la tête du ventilateur de la carte mère de CPU.

ESPAÑOL
Cuando la NT08-115XP está instalada, conecte el cable del ventilador de la CPU al conector del ventilador de la CPU en su placa base.

ITALIANO
Quando NT08-115XP è installato, collegare il cavo ventola CPU al collettore ventola CPU della scheda madre.


РУССКИЙ
После установки NT08-115XP подсоедините кабель вентилятора процессора к разъему вентилятора системной платы.

繁體中文
當NT08-115XP 安裝完成後, 將CPU風扇的連接線接上主機板風扇接頭。

简体中文
当NT08-115XP 安装完成后, 将CPU风扇的连接线接上主机板风扇接头。

日本語
NT08-115XP が設置されたら、CPUファンケーブルをマザーボードのCPUファンヘッダに接続します。

한국어
NT08-115XP가 설치되면 CPU 팬 케이블을 CPU용 메인보드 팬 헤더에 연결합니다.

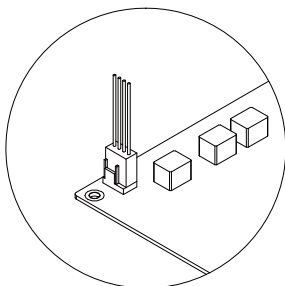

Removal Guide

1

ENGLISH
Remove the CPU fan cable from the motherboard fan header.

DEUTSCH
Entfernen Sie das CPU-Lüfterkabel von der Motherboard-Lüftersteckleiste.

FRANÇAIS
Retirez le câble du ventilateur de la tête du ventilateur de la carte mère.

ESPAÑOL
Retire el cable del ventilador de la CPU del conector de la placa base.

ITALIANO
Rimuovere il cavo ventola CPU dal collettore ventola della scheda madre.


РУССКИЙ
Отсоедините кабель вентилятора процессора от разъема вентилятора системной платы.

繁體中文
將CPU風扇的連接線從主機板風扇接頭移除。

简体中文
將CPU風扇的連接線從主機板風扇接頭移除。

日本語
CPUファンケーブルをマザーボードのファンヘッダから外します。

한국어
CPU 팬 케이블을 메인보드 팬 헤더에서 분리합니다.

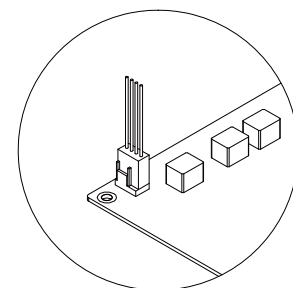

2

ENGLISH
Rotate each fastener in a counterclockwise direction.

DEUTSCH
Drehen Sie die einzelnen Halterungen gegen den Uhrzeigersinn.

FRANÇAIS
Faites tourner chaque fixation rapide dans le sens inverse des aiguilles d'une montre.

ESPAÑOL
Gire cada cierre en dirección contraria a las agujas del reloj.

ITALIANO
Rotare ciascun gancio in senso orario.


РУССКИЙ
Поверните каждый зажим против часовой стрелки.

繁體中文
請依圖示箭頭方向逆時針旋轉散熱器螺絲。

简体中文
请依图示箭头方向逆时针旋转散热器螺丝。

日本語
各ファスナーを反時計回りに回します。

한국어
각 고정핀을 시계 반대방향으로 돌려줍니다.

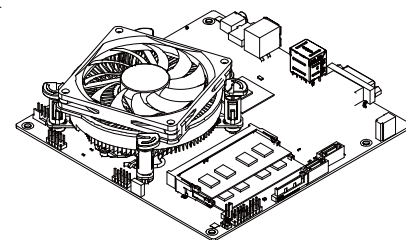

3

ENGLISH
Loosen and pull up two screws in position A and then the other two in position B to remove the CPU Cooler from the motherboard

DEUTSCH
Lösen und entnehmen Sie zum Entfernen des CPU-Kühlers vom Motherboard die beiden Schrauben in Position A, dann die beiden Schrauben in Position B.

FRANÇAIS
Devissez et retirez deux vis en position A puis les deux autres en position B pour retirer le refroidisseur de CPU de la carte mère.

ESPAÑOL
Afloje y tire de los dos tornillos en la posición A y luego de los otros dos en la posición B para retirar el disipador de la CPU de la placa base A.

ITALIANO
Allentare e sollevare le due viti in posizione A, quindi le altre due viti in posizione B per rimuovere il dissipatore di calore CPU dalla scheda madre


РУССКИЙ
Ослабьте и потяните вверх два винта в положении A, а затем другие два винта в положении B для снятия вентилятора процессора с системной платы

繁體中文
請依圖示依序鬆開並拉起位置A的螺絲, 再依序鬆開並拉起位置B的螺絲。

简体中文
请依图标依序松开并拉起位置A的螺丝, 再依序松开并拉起位置B的螺丝。

日本語
Aの位置のネジ2本を緩めて外し、それからBの位置のネジを緩めてCPUクーラーをマザーボードから取り外します。

한국어
위치 A에서 2개의 나사를 풀어 위로 당긴 후 위치 B에서 나머지 2개의 나사를 풀어 위로 당겨 CPU 쿨러를 메인보드에서 분리합니다.

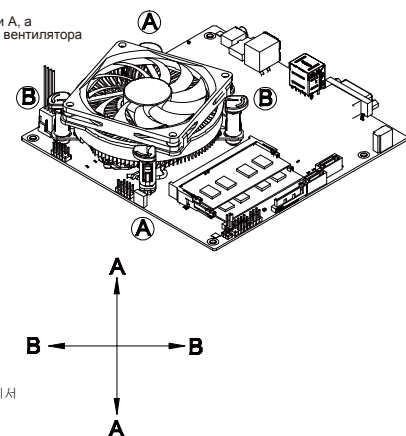

4

ENGLISH
Remove the CPU cooler from the motherboard.

DEUTSCH
Nehmen Sie den CPU-Kühler vom Motherboard ab.

FRANÇAIS
Retirez le dissipateur de la carte mère.

ESPAÑOL
Retire el disipador de la CPU de la placa base.

ITALIANO
Rimuovere il cooler del CPU dalla scheda madre.

РУССКИЙ
Въньте кулер ЦП из материнской платы.

繁體中文
請將NT08-115XP散熱器自主機板上移除。

简体中文
請將NT08-115XP散熱器自主機板上移除。

日本語
マザーボードからCPUクーラーを取り外します。

한국어
메인보드로부터 CPU 쿨러를 제거합니다.

