




SilverStone LC16M VFD/IR Hardware Installation Guide

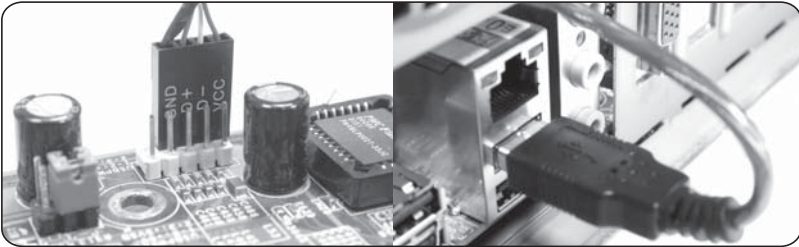


Insert the 4 pin USB connector from the VFD/IR module to your motherboard USB pin header. You can also use the included USB adapter to connect to an external USB port header on the motherboard

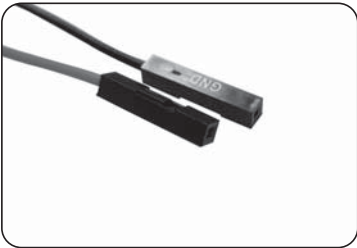


From the front panel VFD/IR module, locate two female single wire leads colored in black and red. The black wire should have the connector labeled, "GND"

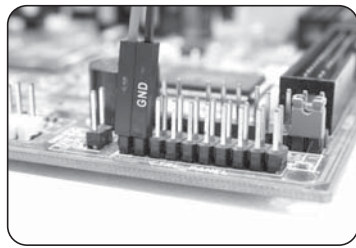


Refer to your motherboard manual and connect the two wire leads to "power switch" or "power button" on the motherboard's front panel pin headers

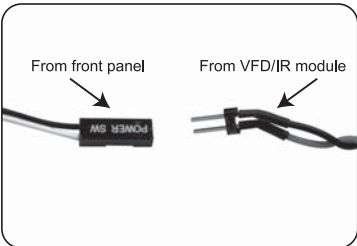


Connect your power switch connector from the front panel to the dual pin header from the VFD/IR module

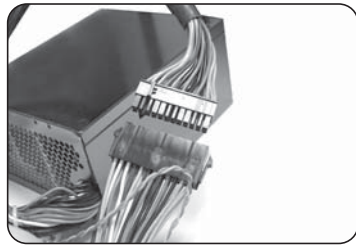

Connect the included ATX adapter to your power supply's ATX connector.

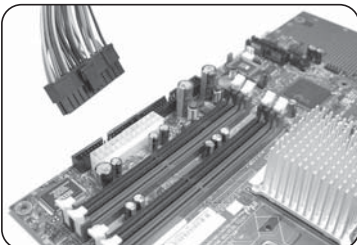

Connect the other end of the ATX adapter to your motherboard. It is compatible with 24pin or 20pin motherboards.

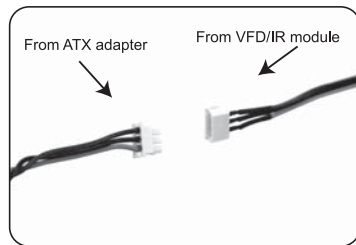

Finally, connect the 3 pin power connector from the VFD/IR module to the ATX adapter's 3pin cable